

## Basic Duty Screw Installation


**Step 1:** Make a level line at the top or bottom of desired location. (Use a laser, level or string for accuracy)



**Step 2:** Secure the first panel by driving the screws through the slots of the panel's front face, directly into the center of the wall studs or blocking.

*Use storeWALL's color matching screws for best match to our wall panels.*

*No pre-drilling or countersinking is necessary. The screw head will flush up with the slot surface*

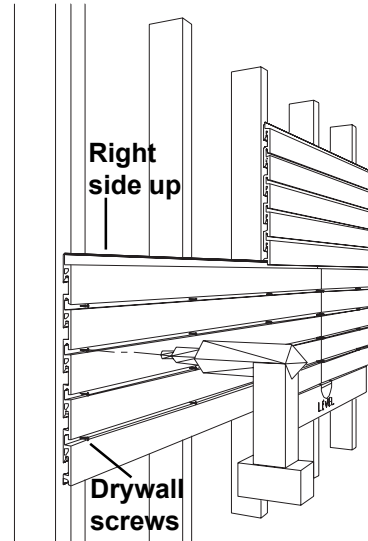

---

## CUTTING

- storeWALL panels cut easily using any traditional wood working tools.
- The cleanest cuts are achieved with a 32 tooth, or larger, carbide blade (triple cut) or blades used to cut MDF (Medium Density Fiber board) & Laminates.
- Treat storeWALL like any prefinished material:
  - Cut "good side up" on a table saw
  - Cut "good side down" with skill saw / radial arm saw / sabre saw



For more information  
please contact us:

(866) 889-2502 (toll free, continental US)  
(414) 434-1620 (direct, Hawaii and Alaska)

Outside the US: +1 414-434-1620

By Email: [Sales@storeWALL.com](mailto:Sales@storeWALL.com)

[www.storeWALL.com](http://www.storeWALL.com)