


## INSTALLATION TYPES

### Option 1 - InstallStrips

#### INSTALLSTRIP

The InstallStrip comes in three sections that can be separated by snapping at the desired break point.

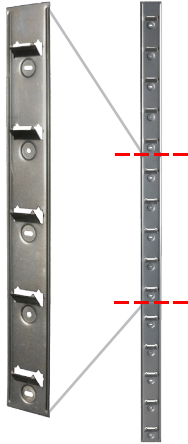

**Step 1:** Make a level line at the top or bottom of desired location.


(Use a laser, level or string for accuracy)



**Step 2:** Screw InstallStrips on each wall stud.



**Step 3:** Place storeWALL panels on the InstallStrips.

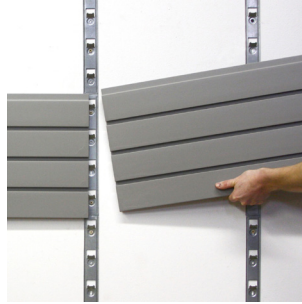

### Option 2 - Screws (Alternative Option)

**Use this option when wall or studs are uneven.**

(Note using this option is not as strong as Option 1)


Use storeWALL's color matching screws for best match to our wall panels.

No pre-drilling or countersinking is necessary. The screw head will flush up with the slot surface

**Step 1:** Make a level line at the top or bottom of desired location. (Use a laser, level or string for accuracy)




**Step 2:** Secure the first panel by driving the screws through the slots of the panel's front face, directly into the center of the wall studs or blocking.

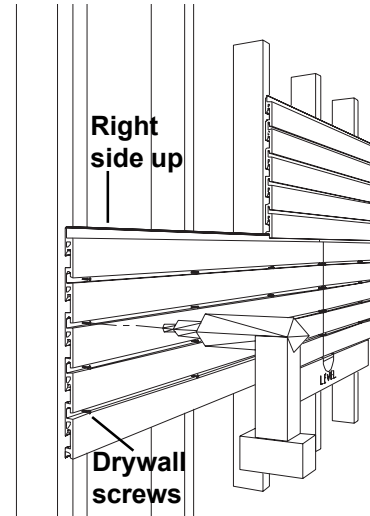

## CUTTING

- storeWALL panels cut easily using any traditional wood working tools.
- The cleanest cuts are achieved with a 32 tooth, or larger, carbide blade (triple cut) or blades used to cut MDF (Medium Density Fiber board) & Laminates.
- Treat storeWALL like any prefinished material:
  - Cut "good side up" on a table saw
  - Cut "good side down" with skill saw / radial arm saw / sabre saw

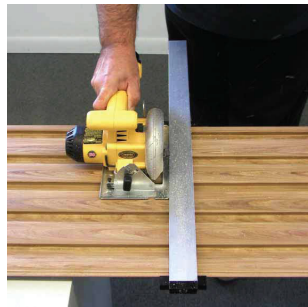

Watch our simple InstallStrip installation:



For more information please contact us:

(866) 889-2502 (toll free, continental US)  
(414) 434-1620 (direct, Hawaii and Alaska)  
(414) 434-1621 (fax)

Outside the US: +1 414-434-1620

By Email: [Sales@storeWALL.com](mailto:Sales@storeWALL.com)

Web: [www.storeWALL.com](http://www.storeWALL.com)